


Dishwasher Temperature Label

T.D.I. Thermal Disinfection Indicators

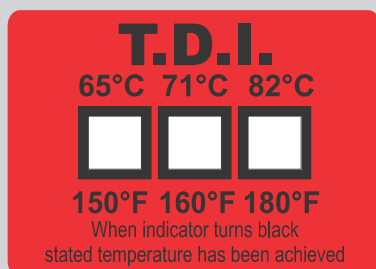


ADVANTAGES

- ◆ **Water resistant**
- ◆ **Inexpensive and easy to use.**
- ◆ **Accurate to $\pm 1^{\circ}\text{C}$ of rated temperature.**
- ◆ **Give permanent record of thermal disinfection temperature achieved.**
- ◆ **Form part of HACCP procedures for evidence of due diligence**
- ◆ **Clearly indicates when correct temperatures are not being achieved**

The information contained in this brochure is to be used only as a guide to assist with product selection. TMC Hallcrest makes no representation or warranty as to the completeness or accuracy of the information contained herein. The products and specifications set forth in this brochure are subject to change without notice and TMC Hallcrest disclaims any and all liability for such changes. The information contained herein is provided without warranties of any kind, either express or implied, and TMC Hallcrest disclaims any and all liability for typographical, printing, or production errors or changes affecting the products and/or the specifications contained herein. All sales of products shall be subject to TMC Hallcrest's General Terms and Conditions of Sale, a copy of which will be provided by upon request.

T.D.I. labels have been developed to withstand the extreme conditions of industrial dishwashers, to form part of the HACCP procedures for evidence of due diligence, giving a permanent record of sterilisation temperatures being achieved. Using T.D.I. labels on any item being passes through the dishwasher will provide a record that the correct temperature has been reached.

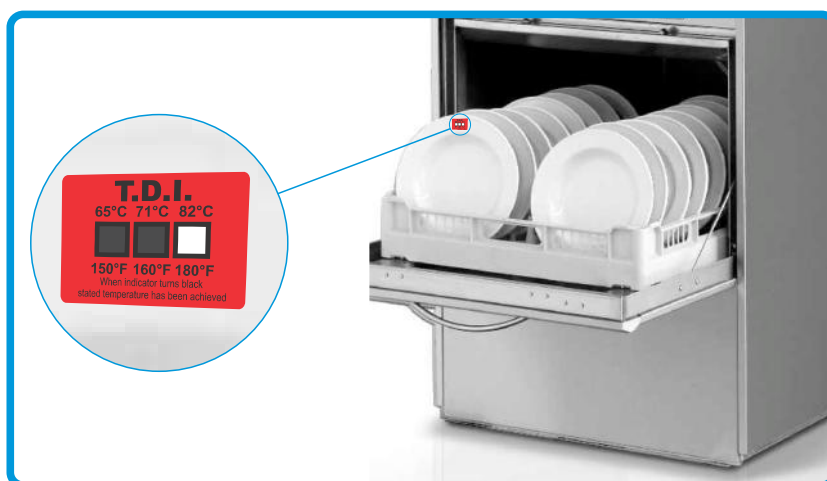


Multi-level Temperature Indicator

Multi-level temperature indicators are used moreover to show what temperature level is being achieved for a more in-depth check

Specifications:

Description:	Disposable with Adhesive Backing
$^{\circ}\text{F}$ or $^{\circ}\text{C}$:	$^{\circ}\text{C}$ and $^{\circ}\text{F}$
Range:	65-82 $^{\circ}\text{C}$
Packaging:	Rolls of 1,000, Bags of 25, Bags of 50
Size:	25mm x 35mm

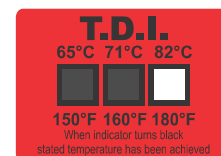

Instructions for use:

1. Attach to clean dry surface.
2. Place in dishwasher and run cycle.
3. Read label: Label will turn from white to black when surface temperature reaches rated temperature.
4. Remove label and attach to maintenance record.